


**EMTEK**.


How to change latch configuration for left handed door

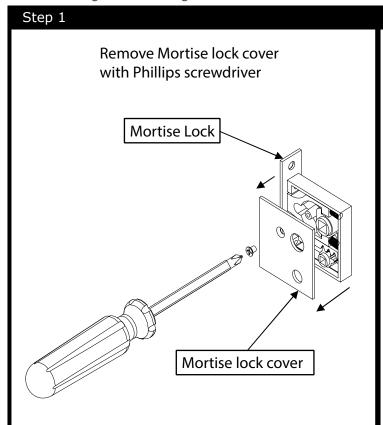

Depress and remove latch springs & cam spring using needle nose pliers.


Step 2

Step 4

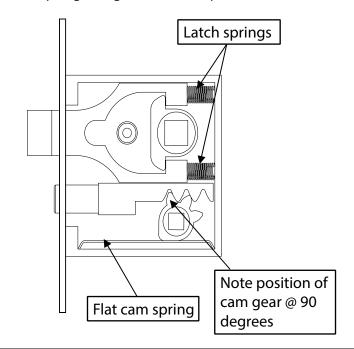

Step 3

With all the springs removed, lift latch from mortise box

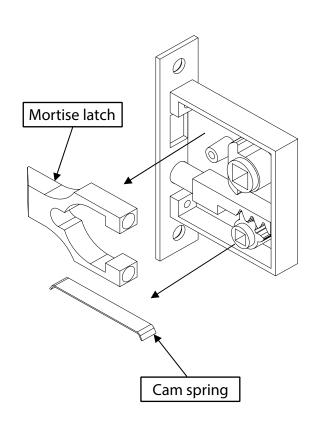

Rotate latch as shown & reverse steps 1-3 to reassemble

