



DOOR DETAIL

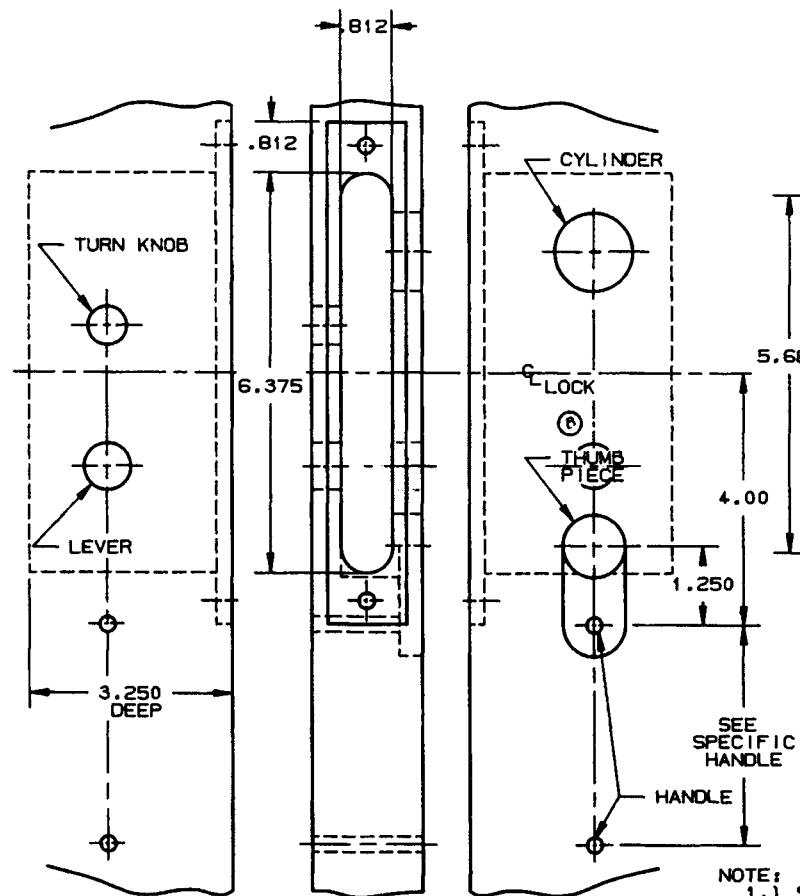

LOCK DETAIL

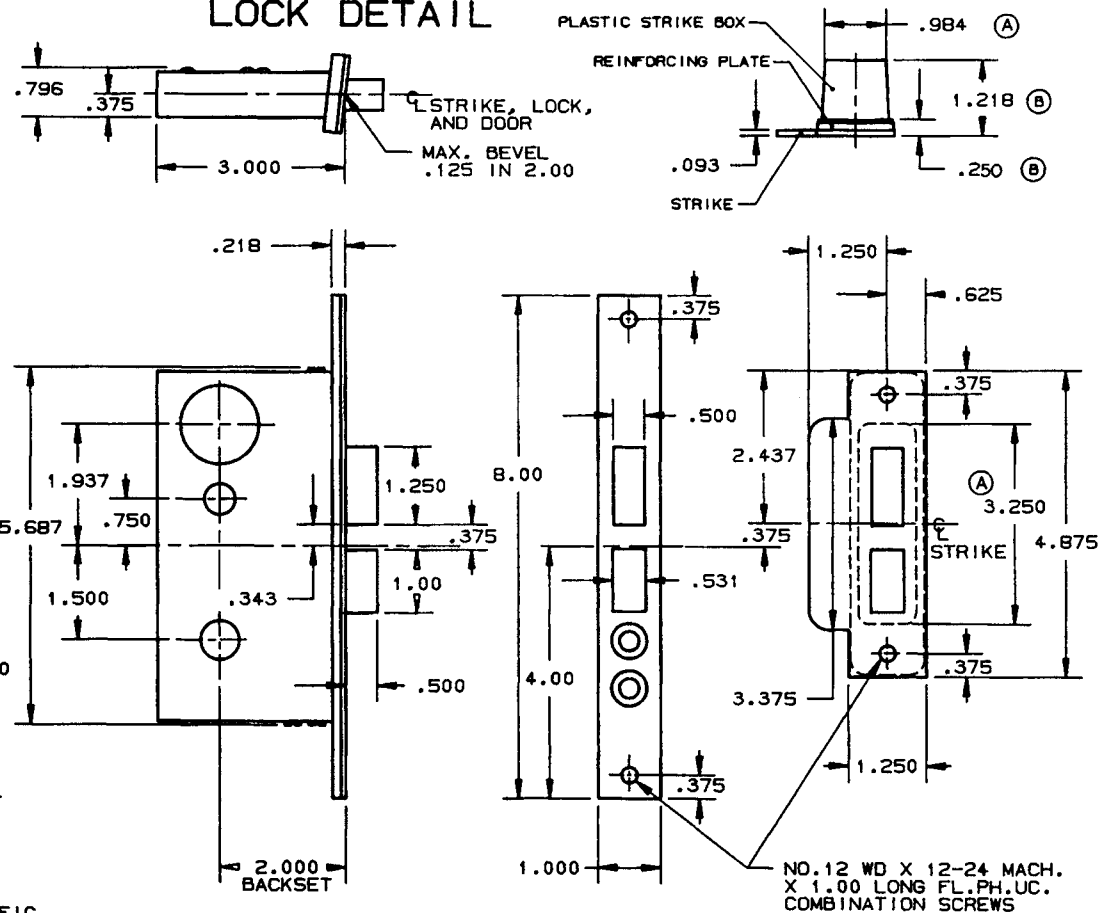

- NOTE:
- 1.) SEE SPECIFIC TRIM TEMPLATE FOR ADDITIONAL DOOR CUTOUT DETAILS.
 - 2.) DISCARD REINFORCING PLATE WHEN INSTALLING ON METAL DOORS & JAMBS.

DO NOT SCALE DRAWING

B. BALDWIN

6832 LEVER, HANDLESET

TEMPLATE NO. VARIATIONS

TEMPLATE NO.

H832-B